

Excellent

Zylinderscharnier zum Einbohren


Cylinder hinge for drilling in

Technik für Möbel




i Bohrmaße Drilling hole distances


Befestigungsbohrung Mounting drilling $\varnothing \times T$ mm	Topfabstand C mm Cup distance C mm	Fuge F mm Reveal F mm	Achsabstand A mm Axial distance A mm	Schraube \varnothing mm Screw \varnothing mm	Bestell-Nr. Order no.
$\varnothing 10 \times 11$	2	2,5	16,1	2	0 031 168
$\varnothing 12 \times 13.5$	2,2	3,5	19,2	2.5	0 031 169
$\varnothing 14 \times 15.5$	3	3	22	2.5	0 031 170
$\varnothing 16 \times 16.5$	3	3	24	3	0 031 171
$\varnothing 18 \times 18.5$	3	3	26,3	3	0 031 172
$\varnothing 24 \times 25$	4,5	3,5	35,6	3.5	0 031 173

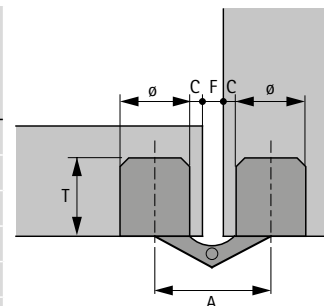

i Anschlagbeispiel Falttür Mounting example folding door

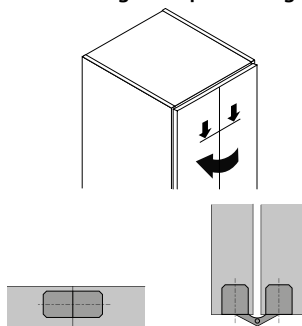

Anschlagbeispiel Tür vorliegend / einliegend Door mounting example overlay / inset

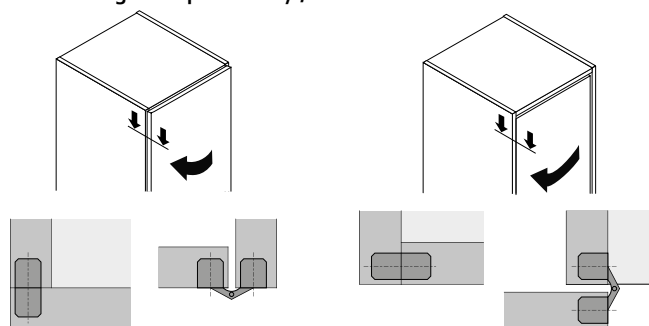

Anschlagbeispiel Klappe Mounting example for flaps

