


# V-Tongue & Groove Set

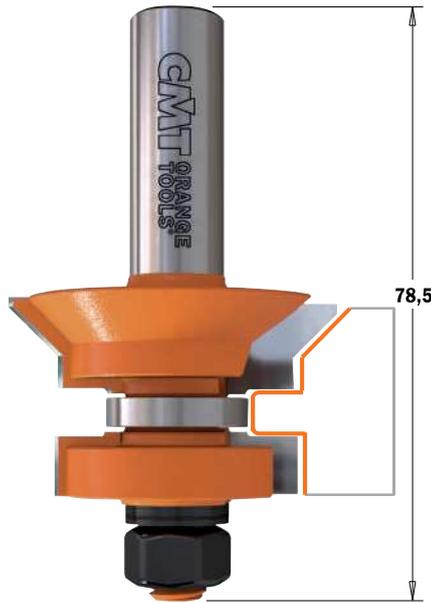


**8/955.506**



If the standard selection of moulding and mill work you find in today's lumber shops isn't satisfactory to your woodworking tastes, then consider CMT's moulding system instead. With these bits, you can make dozens of elaborate profiles by combining two or more passes. Avoid the average and create your own mouldings. Some initial suggestions are illustrated below.

**SAFETY TIPS:** use these bits with a fence. The profiles shown below are milled from heavy stock then refined to the desired shape.

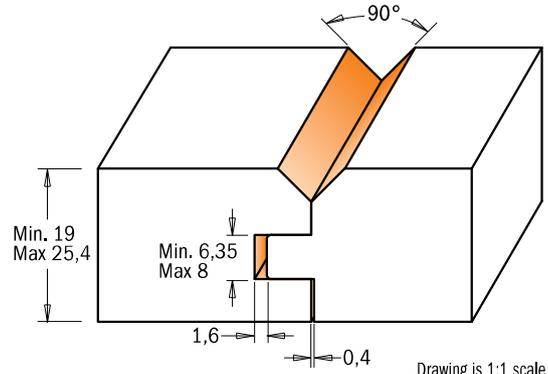


D mm	T <sub>1</sub> mm		ORDER NO. S=Ø12mm	ORDER NO. S=Ø12,7mm
44,4	19+25,4	10	955.506.11	855.506.11

Spare parts

822.013.11	822.014.11	791.011.00	791.005.00	990.020.00

Spare parts: 541.515.00 0,1mm spacer  
541.516.00 0,3mm spacer  
541.517.00 0,5mm spacer  
990.407.00 Shield


# Edge Banding Bits Set

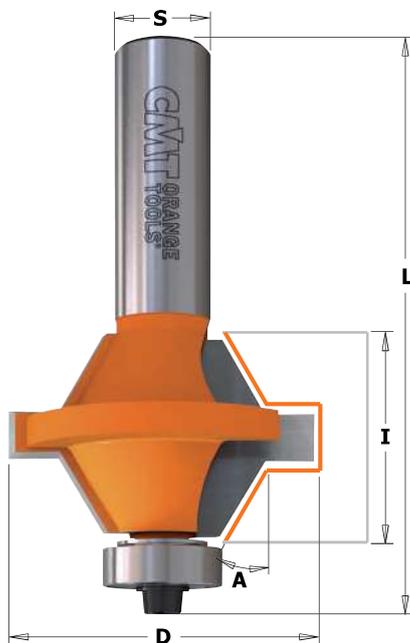

**8/955.510**



This is a great set to create cost-effective, yet attractive durable edges to your cabinet doors. For use with 12,7mm or 25,4mm thick panels in plywood or MDF. Easy to use: center each cutter on the stock and make the cut; glue the two pieces together; flush trim after assembly, if necessary. The set features a 60° angle tongue & groove with an ample surface area for glue application.

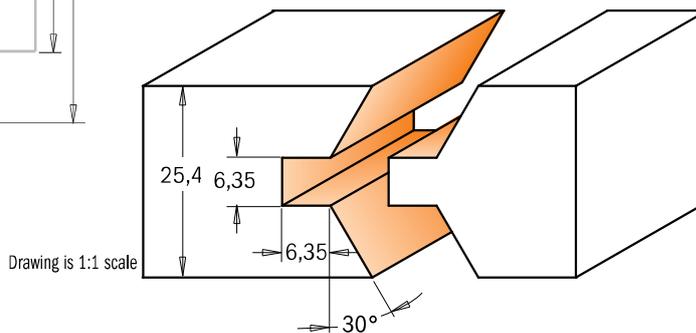

D mm	I mm	A	L mm		ORDER NO. S=Ø12mm	ORDER NO. S=Ø12,7mm
40	25,4	30°	74,5	5	955.510.11	855.510.11

Spare parts

990.423.00	791.018.00	990.058.00	991.057.00